Register your product and get support at

www.philips.com/welcome

BDP7500 MK II

(BDP7500S2/BDP7500B2)

EN **User manual**

PHILIPS

LASER

CAUTION:
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION:
VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. DO NOT STARE INTO BEAM.

LOCATION:
INSIDE, NEAR THE DECK MECHANISM.

Italia

DICHIARAZIONE DI CONFORMITA'

Si dichiara che l'apparecchio BDP7500 MK II, Philips risponde alle prescrizioni dell'art. 2 comma 1 del D.M. 28 Agosto 1995 n.548.
Fatto a Eindhoven

Philips Consumer Lifestyles
Philips, Glaslaan 25616 JB Eindhoven,
The Netherlands

Norge
Typeskilt fi nnes på apparatens underside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde netdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

DK
Advarsel: Usynlig laserstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå utsættelse for stråling.
Bemærk: Netafbryderen er sekundært indkoblet og ofbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lysnettet så længe netstikket sidder i stikkontakten.

S
Klass 1 laseraparat
Varning! Om apparaten används på annat sätt än i denna bruksanvisning specifi cerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.
Observera! Stömbrytaren är sekundärt kopplad och bryter inte strömmen från nätet. Den inbyggda nätdelen är därför ansluten till elnätet så länge stickproppen sitter i vägguttaget.

SF
Luokan 1 laserlaite
Varoitus! Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.
Oikeus muutoksiin varataan. Laite ei saa olla alttiina tippu-ja roiskevedelle. Huom. Toiminnanvalitsin on kytketty toisiopuolelle, eikä se kytke laitetta irti sähköverkosta. Sisäänrakennettu verkko-osa on kytkettynä sähköverkkoon aina silloin, kun pistoke on pistorasiassa.

Producent zastrzega możliwość wprowadzania zmian technicznych.

ČESKA REPUBLIKA

Výstraha! Tento přístroj pracuje s laserovým paprskem. Při nesprávné manipulaci s přístrojem (v rozporu s tímto návodem) může dojít k nebezpečnému ozáření. Proto přístroj za chodu neotevírejte ani nesnímejte jeho kryty. Jakoukoli opravu vždy svěřte specializovanému servisu.

Nebezpečí! Při sejmutí krytů a odjištění bezpečnostních spínačů hrozí nebezpečí neviditelného laserového záření!

Chraňte se před přímým zásahem laserového paprsku.

Pokud byste z jakéhokoli důvodu přístroj demontovali, vždy nejdříve vytáhněte síťovou zástrčku.

Přístroj chraňte před jakoukoli vlhkostí i před kapkami vody.

Technické údaje laseru:

- Typ laseru:
  - Laserová dioda disku BD: AlGaInN
  - Laserová dioda disku DVD: AlGaInP
  - Laserová dioda disku CD: AlGaInP
- Vlnová délka:
  - BD: 405 +5 nm/-5 nm
  - DVD: 655 +10 nm/-10 nm
  - CD: 790 +10 nm/-20 nm
- Výstupní výkon:
  - BD: Max. jmenovitý: 20 mW
  - DVD: Max. jmenovitý: 6m W
  - CD: Max. jmenovitý: 7 mW

This product is in compliance with the EEE directive.

EEE yönergesine uygundur.

Contents

1	Important	4
	Safety and important notice	4
	Trademark notice	4
2	Your product	6
	Feature highlights	6
	Playable media	6
	Product overview	6
3	Connect	8
	Connect video/audio cables	8
	Route audio to other devices	9
	Connect a USB device	10
	Connect a network	10
	Connect power	11
4	Get started	11
	Prepare the remote control	11
	Find the TV input	11
	Use the Home menu	11
	Navigate the menu	11
	Select menu display language	12
	Setup a network	12
	Use Philips EasyLink	13
5	Play	13
	Play a disc	13
	Play from USB device	14
	Play video	14
	Play photo	16
	Play music	17
	Browse PC	18
	Browse Net TV	18
6	Adjust settings	19
	Video setup	19
	Audio setup	20
	Network setup	21
	EasyLink setup	22
	Preference setup	22
	Advanced setup	23
7	Additional Information	24
	Update software	24
	Care	25
	Specifications	25
8	Troubleshooting	25
9	Glossary	27

1 Important

Safety and important notice

Warning

- Risk of overheating! Never install the product in a confined space. Always leave a space of at least 4 inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.
- Never place the product, remote control or batteries near naked flames or other heat sources, including direct sunlight.
- Only use this product indoors. Keep this product away from water, moisture and liquid-filled objects.
- Never place this product on other electrical equipment.
- Keep away from this product during lightning storms.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Visible and invisible laser radiation when open. Avoid exposure to beam.

CLASS 1
LASER PRODUCT

This product complies with the radio interference requirements of the European Community.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Copyright notice

Be responsible
Respect copyrights

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Open source software

Philips Electronics Singapore Pte Ltd. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open.source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands." If you do not receive timely confirmation of your letter, please email to the email address above.

Trademark notice

'Blu-ray Disc' and 'Blu-ray Disc' logo are trademarks.

HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.

DLNA®, the DLNA logo and DLNA CERTIFIED® are trademarks, service marks, or certification marks of the Digital Living Network Alliance.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, DTS-HD Master Audio, and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

ABOUT DIVX PLUS ™ HD: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video, including DivX Plus™ HD video (H.264/.MKV) up to 1080p and premium content. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.

BONUSVIEW™

'BD LIVE' and 'BONUSVIEW' are trademarks of Blu-ray Disc Association.

'AVCHD' and 'AVCHD' logo are trademarks of Matsushita Electric Industrial Co., Ltd and Sony Corporation.

'x.v.Colour' is a trademark of Sony Corporation.

The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, Inc.

'DVD Video' is a trademark of DVD Format/Logo Licensing Corporation.

Java and all other Java trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.

Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

2 Your product

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers (e.g. product software upgrade), register your product at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back of your product. Write the numbers here:

Model No. _____

Serial No. _____

Feature highlights

For optimal performance of this product, it is suggested to regularly update the sofware of this product.

NetTV
Net TV brings you a wide range of online information and entertainment on your TV which is connected to this product. With Net TV you can enjoy some of the best websites tailored to fit your TV.

DLNA
Simply connect this product to your home network via the LAN jack or wirelessly with an optional Philips Wi-Fi USB adapter. You can stream your video and picture to this product and watch it directly on your TV.

DivX Plus HD
This product is a DivX Plus HD Certified device. It plays all DivX video including DivX Plus HD video files (H.264 video with the .mkv file extension and AAC audio) up to 1080p and premium Hollywood content.

High-Definition entertainment
Watch high-definition content disc with HDTV (High Definition Television). Connect it through a high speed HDMI cable (1.3 or category 2). You can enjoy excellent picture quality up to 1080p resolution with the frame rate of 24 frames per second with progressive scan output.

High fidelity 7.1 channel surround sound
This product supports the high-definition audio such as Dolby TrueHD and DTS-HD Master Audio.

BD-Live
Connect this product to the movie studios website via the LAN port or external Wi-Fi to access a variety of up-to-date content (e.g. refreshed previews and exclusive special features).

Playable media

This product can play:
- BD-Video, BD-R/RE2.0
- DVD, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL (Dual Layer)
- Video CD/SVCD
- Audio CD, CD-R/CD-RW, MP3 media, WMA media, JPEG files
- DivX (Ultra)/DivX Plus HD media, MKV media
- USB flash drive

Region codes

You can play discs with the following region codes.

Region code		Countries
DVD	Blu-ray	
		Europe, United Kingdom

Product overview

Main unit



1. ⏻
   - Turn on this product or switch to standby mode.
2. **Display panel**
3. **IR sensor**
   - Detect signals from the remote control. Always point the remote control at the IR sensor.
4. **Disc compartment**
5. ⏏
   - Open or close the disc compartment.
6. ▶
   - Start or resume play.
7. ❚❚
   - Pause play.
8. **jack**
   - Connect a USB flash drive.

Remote control

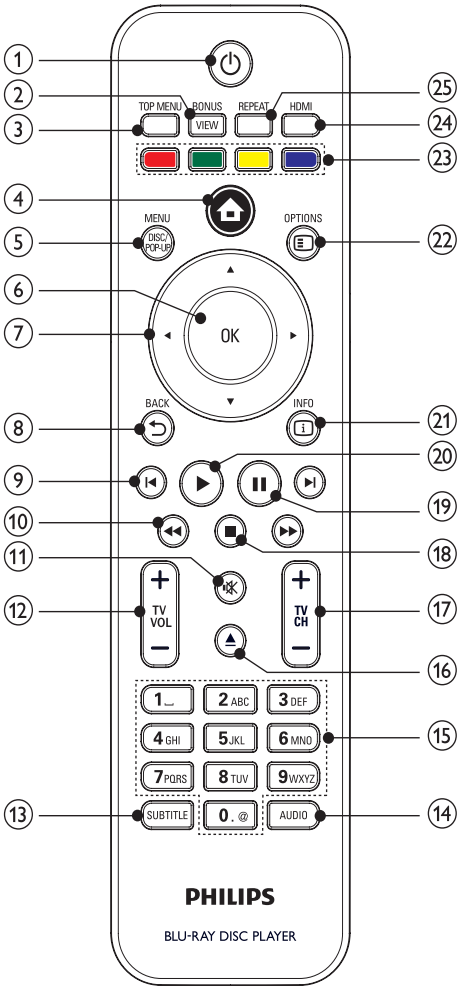

① ⏻
- Turn on this product or switch to standby mode.
- When EasyLink is enabled, press and hold for at least three seconds to turn all connected HDMI CEC compliant devices to standby.

② BONUSVIEW
- Turn on or off the secondary video in a small screen window during play (applicable only to a Blu-ray disc that supports the BONUSVIEW or Picture-In-Picture feature).

③ TOP MENU
- **BD**: Display the top menu.
- **DVD**: Display the title menu.

④ 🏠
- Access the home menu of this product.

⑤ DISC MENU / POP-UP MENU
- **BD**: Access or exit the pop-up menu.
- **DVD**: Access or exit the disc menu.

⑥ OK
- Confirm an entry or selection.

⑦ ▲▼◀▶
- Navigate through the menus.

⑧ ⮌ BACK
- Return to a previous display menu.

⑨ ⏮ / ⏭
- Skip to the previous or next title, chapter, or track.

⑩ ◀◀ / ▶▶
- Search backward or forward.

⑪ 🔇
- Mute TV volume (applicable only to certain Philips brand TVs).

⑫ TV VOL +/-
- Adjust TV volume (applicable only to certain Philips brand TVs).

⑬ SUBTITLE
- Select a subtitle language on a disc.

⑭ AUDIO
- Select an audio language or channel on a disc.

⑮ Alphanumeric buttons
- Select an item to play.
- Enter values.
- Enter letters via SMS style entry.

⑯ ⏏
- Open or close the disc compartment.

⑰ TV CH +/-
- Select a TV channel (applicable only to certain Philips brand TVs).

⑱ ■
- Stop play.

⑲ ⏸
- Pause play.
- Move the paused picture one step forward.

⑳ ▶
- Start or resume play.

㉑ INFO
- Display the current status or the disc information.

㉒ OPTIONS
- Access options for the current activity or selection.

㉓ Color buttons
- **BD**: Select tasks or options.

㉔ HDMI
- Select the video resolution of HDMI output.

㉕ REPEAT
- Select repeat play or shuffle play.

3 Connect

Make the following connections to use this product.

Basic connections:
- Video
- Audio
- Power

Optional connections:
- Route audio to other devices
  - HDMI-compliant AV receiver/amplifier
  - Multi-channel AV amplifier/receiver
  - Digital AV amplifier/receiver
  - Analog stereo system
- USB flash drive
- Wired/Wireless network

Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all the devices are disconnected from the power outlet.

Connect video/audio cables

Select the best video connection that the TV can support.
- **Option 1:** Connect to the HDMI jack (for a HDMI, DVI or HDCP-compliant TV).
- **Option 2:** Connect to the component video jacks (for a standard TV or Progressive Scan TV).
- **Option 3:** Connect to the composite video jack (for a standard TV).

Option 1: Connect to the HDMI jack

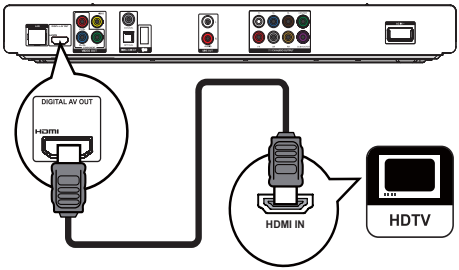

1 Connect an HDMI cable (not supplied) to:
- the **HDMI** jack on this product.
- the HDMI input jack on the TV.

Tip

- If the TV has a DVI connector only, connect via an HDMI/DVI adaptor. Connect an audio cable for sound output.
- If there is a blank screen under HDMI connection, on the remote control press ⌂ and then press "731" (numeric buttons) to recover picture display.
- If this product connects to a TV compatible with 1080p or 1080p/24Hz, Philips recommends HDMI category 2 cable, also known as High Speed HDMI cable, for optimal video and audio output.
- To play the digital video images of a BD-video or DVD-video via an HDMI connection, it is necessary that both this product and the display device (or an AV receiver/amplifier) support a copyright protection system called HDCP (high-bandwidth digital content protection system).
- This type of connection provides best picture quality.

Option 2: Connect to the component video jack

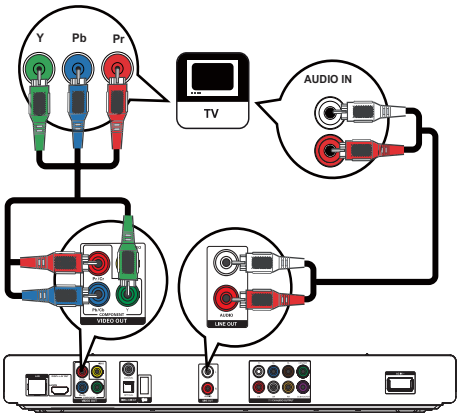

1 Connect the component video cables (not supplied) to:

- the **Y Pb/Cb Pr/Cr** jacks on this product.
- the COMPONENT VIDEO input jacks on the TV.

2 Connect the audio cables to:
- the **LINE OUT/AUDIO -L/R** jacks on this product.
- the AUDIO input jacks on the TV.

Tip

- The component video input jack on the TV might be labeled as Y Pb Pr or YUV.

Option 3: Connect to the composite video jack

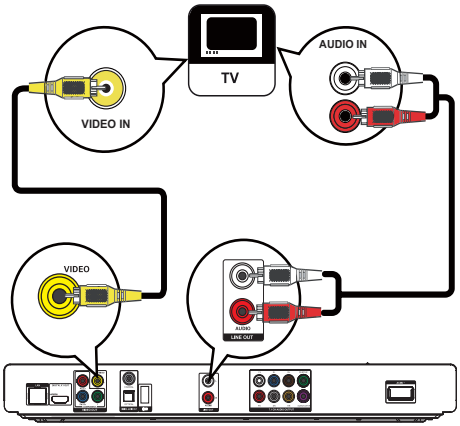

1 Connect a composite video cable to:
- the **VIDEO** jack on this product.
- the VIDEO input jack on the TV.

2 Connect the audio cables to:
- the **LINE OUT/AUDIO -L/R** jacks on this product.
- the AUDIO input jacks on the TV.

Tip

- The video input jack on the TV might be labeled as A/V IN, VIDEO IN, COMPOSITE or BASEBAND.

Route audio to other devices

You can route the audio from this product to other devices.

Connect to HDMI-compliant AV receiver/ amplifier

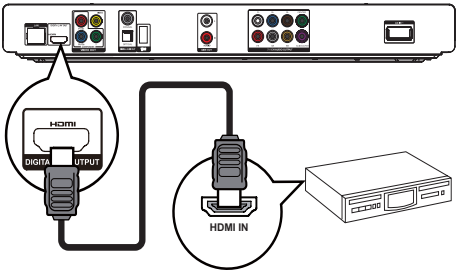

1 Connect an HDMI cable (not supplied) to:
- the **HDMI** jack on this product.
- the HDMI jack input jack on the device.

Tip

- The HDMI connection provides best audio quality.

Connect to multi-channel AV receiver/ amplifier

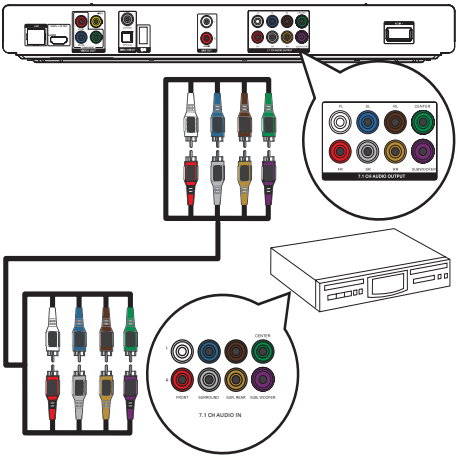

1 Connect the 7.1-channel audio cables (not supplied) to:
- the **7.1 CH AUDIO OUTPUT** jacks on this product.
- the corresponding AUDIO input jacks on the device.

Tip

- To connect 5.1-channel AV receiver/amplifier, connect the 7.1-channel audio jacks except the **SL/SR** jacks.
- You can optimize the speaker output (see "Adjust settings" > **[Audio Setup]** >**[Speaker Setup]**).

Connect to digital AV amplifier/receiver

Connect to coaxial jack

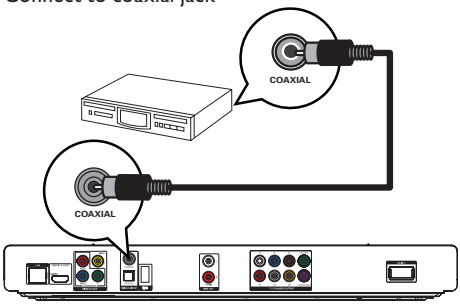

1 Connect a coaxial cable (not supplied) to:
- the **COAXIAL** jack on this product.
- the COAXIAL/DIGITAL input jack on the device.

Connect to optical jack

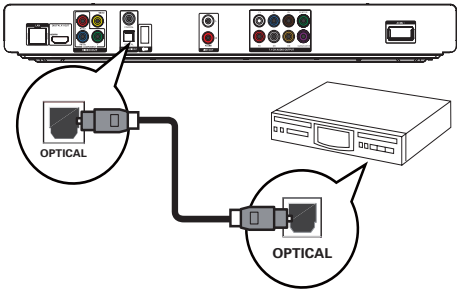

1 Connect an optical cable (not supplied) to:
- the **OPTICAL** jack on this product.
- the OPTICAL/DIGITAL input jack on the device.

Connect analogue stereo system

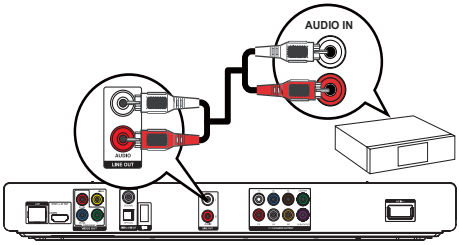

1 Connect the audio cables to:
- the **LINE OUT/AUDIO -L/R jacks on this product.**
- the AUDIO input jacks on the device.

Connect a USB device

1 Connect a USB device to the ⇠ (**USB**) jack on the front panel of this product.

Note

- Press ⌂, and select **[Browse USB]** in the menu to access the content and play the files.
- Connect a USB device only to the ⇠ jack on the front panel of this product.
- Philips does not guarantee compatibility with all USB devices.

Connect a network

With a wired or wireless connection (see "Get started" > "Set up a network"), you can connect this product to:
- the Internet (for software update/BD Live/Net TV service).
- or a home network (to access media files from a DLNA media server, e.g. PC).

Note

- Internet access to Philips website for software update may not be allowed, depending on the router you use or the Internet Service Provider's policy. Contact your Internet Service Provider for more information.

Connect power

Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.

Note

- The type plate is located on the back of the product.

1 Connect the AC power cable to:
   - this product.
   - the wall socket.

   ↳ This product is ready to be set up for use.

4 Get started

Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

Prepare the remote control

1 Press and push the battery compartment to slide it open (see "1" in the illustration).
2 Insert two AAA batteries with correct polarity (+/-) as indicated.
3 Push and slide back the battery compartment (see "3" in the illustration).

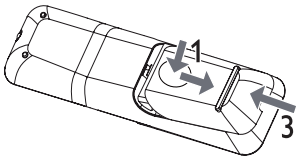

Note

- If you are not going to use the remote control for a long time, remove the batteries.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Batteries contain chemical substances, so they should be disposed of properly.

Find the TV input

1 Press ⏻ to turn on this product.
2 Turn on the TV and switch to the video input (refer to the TV user manual on how to select the A/V input).

Use the Home menu

1 Press ⌂ to display the home menu.
   - To start disc play, select **[Play Disc]**.
   - To view the USB contents, select **[Browse USB]**.
   - To access the setup menus, select **[Setup]**.
   - To access media files from a DLNA home network media server (e.g. PC), select **[Browse PC]**.
   - To access the Net TV services on the Internet, select **[Browse NetTV]**.

Navigate the menu

1 When a menu is displayed, press the buttons on the remote control to navigate.

Button	Action
▲▼	Move up or down.
◀▶	Move left or right.
OK	Confirm a selection.
1 2 ABC 3 DEF 4 GHI 5 JKL 6 MNO 7 PQRS 8 TUV 9 WXYZ 0	Enter numbers/letters/text.

Select menu display language

Note

- If this product is connected to a HDMI CEC compliant TV, skip this setting. It switches automatically to the same OSD menu language as per your TV setting (if the language set on TV is supported by this product).

1 In the Home menu, select **[Setup]** and press **OK**.
2 Select **[Preference Setup]**, and press▶.
3 Select **[Menu Language]**, and press ▶.

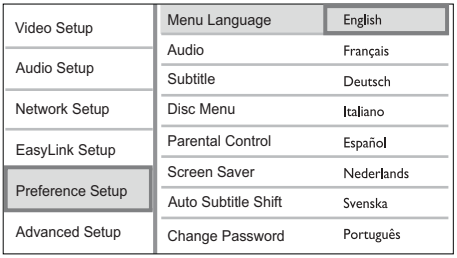

- The language options may vary from different regions.

4 Press ▲▼ to select a language, and press **OK**.

Setup a network

You can connect this product to the Internet (for software update/BD Live/Net TV service), or to a home network (to access media files from a DLNA media server, e.g. PC).

To access media files from your computer, you need to ensure:

- a media server software (e.g. Windows Media Player 11) is installed on your computer;
- and the media server software is configured to enable media sharing (See the "Help" documentation from the media server software).

Set up a wired network

Note

- Ensure that the network cables are properly connected.

1 Connect a network cable (not supplied) to:
   - the **LAN** jack on this product.
   - the LAN jack on a router with Internet connection.
2 To access media files from your computer, connect the computer to the router.
3 Turn on this product, the computer and the router.

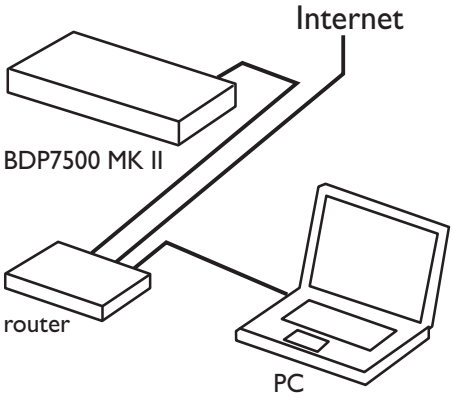

Tip

- The wired network ensures the best performance for data transmission between the devices.

Set up a wireless network

Note

- For wireless connection, you need to use an optional Philips Wi-Fi USB adapter (named WUB1110).
- The Wi-Fi USB adapter (WUB1110) is not included. To purchase this adapter, visit shop.philips.com. If the Philips online shop is not available in your country, please contact Philips customer service. For contact details, go to www.philips.com/support.

1 Connect a Philips Wi-Fi USB adapter (named WUB1110, separately sold) to the **Wi-Fi** jack on the back of this product.
2 To access media files from you computer, connect the computer to the router.
3 Turn on this product, the computer and the router.

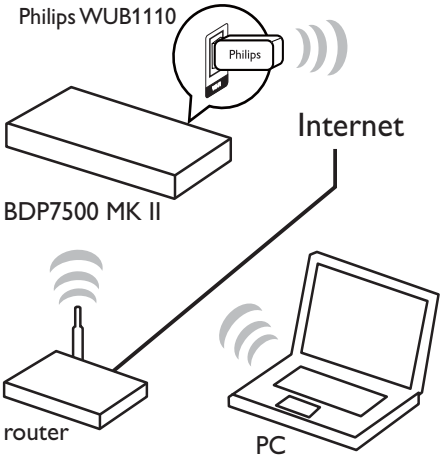

Tip

- The wireless performance can vary due to bandwidth connection, network traffic and some environmental effects, such as surrounded by metal panel or heavy concrete, radio interference and coverage distance.

Install the network connection

For the first time you connect the network, install the network connection.

1 Set up a wired or wireless network.
2 Press ⌂ to display the home menu.
3 Select **[Setup]** and press **OK**.
4 Select **[Network Setup]**, and press ▶.
5 Select **[Network Installation]**, and press **OK**.

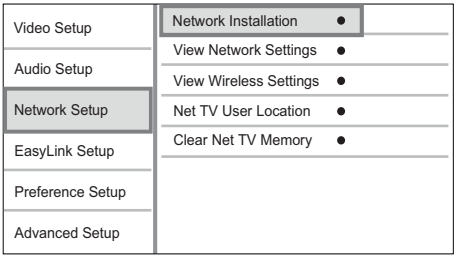

6 Follow the on-screen instructions to complete the network installation.
↳ After the network installation completes, you can access the services: browse Net TV, browse PC, BD-Live, software updates.

Tip

- You can check the status of the wired or wireless connection of this product (see "Adjust settings" > "Network Setup" >**[View Network Settings]** or **[View Wireless Settings]**).

Use Philips EasyLink

This product supports Philips EasyLink which uses the HDMI CEC (Consumer Electronics Control) protocol. You can use one single remote control to control EasyLink-compliant devices that are connected through HDMI connectors.

Note

- To enable the EasyLink feature, you must turn on the HDMI CEC operations on the TV and on other devices connected to TV. Refer to the TVs/devices manual for details.

One-touch play

1 Press ⏻ (standby) to turn on this product.
↳ The TV (if the TV supports one-touch play) automatically turns on and switches to the correct video-in channel.
↳ If a disc is loaded in this product, disc play automatically starts.

One-touch standby

1 Press and hold ⏻ (standby) for more than 3 seconds.
↳ All the connected devices (if the device supports one-touch standby) automatically switch to standby.

Note

- Philips does not guarantee interoperability with other HDMI CEC devices.

5 Play

Play a disc

Caution

- Do not place any objects other than discs into the disc compartment.

1 Press ⏏ to open the disc compartment.
2 Insert a disc with its label facing up.
3 Press ⏏ to close the disc compartment and start disc play.
   - To view disc play, turn on the TV to the video input.
   - To stop disc play, press ■.

Note

- Check disc/file formats supported (see "Your product" > "Playable media").
- If the password entry menu is displayed, enter the password before you can play the locked or restricted disc (see "Adjust settings" > "Preference Setup" > **[Parental Control]**).
- If you pause or stop a disc, the screen saver appears after 10 minutes of inactivity. To deactivate the screen saver, press any button.
- After you pause or stop a disc and no button is pressed within 30 minutes, this product automatically switches to standby.

Play from USB device

Play or view media files on the following USB devices:
- flash drive
- memory card reader
- HDD (This product can detect only a portable hard disc drive with USB power peak current no more than 500mA.)

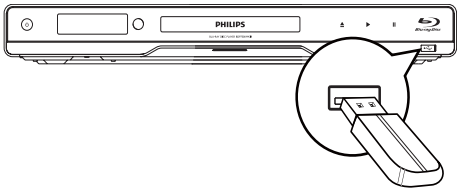

1 Connect a USB device to the ⇠(**USB**) jack on the front panel of this product.
2 Press ⌂, and select **[Browse USB]**, and press **OK**.
   ↳ A contents menu is displayed.
3 Select a file to play, and press **OK**.
   ↳ Play starts (see "Play video", "Play photo", Play music" for details).
   - To stop play, press ■ or remove the USB device.

Note

- Philips does not guarantee compatibility with all USB devices.
- Not all digital cameras are supported. Digital cameras that require PC programme installation are not supported.
- NTFS (New Technology File System) data format is not supported.

Play video

Control video play

1 Play a title.
2 Use the remote control to control the play.

Button	Action
❚❚	Pause play.
▶	Start or resume play.
■	Stop play.
⏮/⏭	Skip to a previous/next title or chapter.
◀◀/▶▶	Search fast-backward or fast-forward. Press repeatedly to change the search speed. • In pause mode, slow a play backward or forward.

Note

- For BD discs with Java application, availability of the play resume function depends on specific discs.

Change video play

1 Play a title.
2 Use the remote control to change the play.

Button	Action
AUDIO	Directly select an audio language or channel on a disc.
SUBTITLE	Directly select a subtitle language on a disc.
REPEAT	Directly select/turn off repeat or shuffle mode. • Repeat options may vary from the disc type. • For VCDs, repeat play is only possible when the PBC mode is turned off.
OPTIONS	Access the above mentioned actions or more options.

Button	Action
INFO	Display the current status or disc information.
BONUSVIEW	Turn on or off the secondary video in a small screen window during play (**applicable only to BD-video that supports the BONUSVIEW or Picture-In-Picture feature**).

Note

- Some operations may not work with some discs. See the information accompanying the disc for details.

Display menu

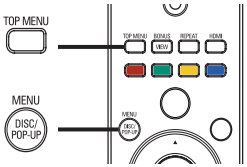

BD-video disc

- **TOP MENU** stop the video play and shows the disc menu. This feature is disc-dependent.
- **POP-UP MENU** access to the BD-video disc menu without interrupting disc play.

DVD-video disc

- **TOP MENU** display the root menu of a disc.
- **DISC MENU** display disc information and guide you through the available functions in the disc.

VCD/SVCD/DivX disc:

- **DISC MENU** display the content of the disc.

Tip

- If the PBC setting is off, the VCD/SVCD skips the menu and starts play from the first title. To display the menu before play, turn on the PBC setting (see "Adjust settings" > **[Preference Setup]** > **[VCD PBC]**).

Select title/chapter

1. During play, press **OPTIONS**.
   ↳ The play options menu is displayed.
2. Select **[Titles]** or **[Chapters]** in the menu, and press **OK**.
3. Select the title or chapter number, and press **OK**.

Skip play to a specific time

1. During play, press **OPTIONS**.
   ↳ The play options menu is displayed.
2. Select **[Time Search]** in the menu, and press **OK**.
3. Press the **Navigation buttons** (▲▼) to change the time to skip to, and press **OK**.

Zoom in/out

1. During play, press **OPTIONS**.
   ↳ The play options menu is displayed.
2. Select **[Zoom]** in the menu, and press **OK**.
3. Press the **Navigation buttons** (◀▶)to select a zoom factor, and press **OK**.
4. Press the **Navigation buttons** to navigate in the zoomed picture.
   - To cancel zoom mode, press **BACK** or **OK** to display the zoom factor bar, and press the **Navigation buttons** (◀▶) until the zoom factor [x1] is selected.

Repeat play for a specific section

1. During play, press **OPTIONS** .
   ↳ The play options menu is displayed.
2. Select **[Repeat A-B]** in the menu, and press **OK** to set the starting point.
3. Forward the video play, and press **OK** to set the ending point.
   ↳ Repeat play starts.
   - To cancel repeat play mode, press **OPTIONS** ,and select **[Repeat A-B]** and press **OK**.

Note

- The marked section for repeat play is only possible within a track/title.

View video play from different camera angles

1. During play, press **OPTIONS**.
   ↳ The play options menu is displayed.
2. Select **[Angle List]** in the menu, and press ▶.
3. Select an angle option, and press **OK**.
   ↳ Play changes to the selected angle.

Note

- Applicable only to discs that contain multi-angle scenes.

Manually shift subtitle display

You can manually adjust the subtitle position on the TV screen.

1 During play, press OPTIONS.
   ↳ The play options menu is displayed.
2 Select **[Subtitle Shift]** in the menu, and press ▶.
3 Press the **Navigation buttons** (▲▼) to shift the subtitle, and press **OK**.

Tip

- Subtitle shift is not supported for DivX video with external subtitles.

Play BD-video

A Blu-ray video disc has a larger capacity and supports features such as high-definition videos, multi-channel surround sounds, interactive menus and so on.

1 Insert a BD-video disc.
2 Press , select **[Play Disc]** and press **OK**.
3 Play automatically starts, or select a play option in the menu and press **OK**.
   - During play, you can press **TOP MENU** to display additional information, features or content stored in the disc.
   - During play, you can press **POP-UP MENU** to display the disc menu without interrupting disc play.

Enjoy BONUSVIEW

(Applicable only to a disc compatible with the BONUSVIEW or Picture-in-Picture feature)
You can instantly view additional content (such as commentaries) in a small screen window.

1 Press **BONUSVIEW** to turn on the secondary video window .
2 Press OPTIONS.
   ↳ The play options menu is displayed.
3 Select **[2nd Audio Language]** or **[2nd Subtitle Language]** in the menu, and press ▶.
4 Select the language to play, and press **OK**.

Enjoy BD-LIVE

(Applicable only to a disc that enables BD-Live bonus content.)
Additional contents (such as movie trailers, subtitles, etc.,) can be downloaded to this product's local storage or a connected USB storage device. Special video data may be played while they are being downloaded.

When the disc supporting BD-Live is played, this product or disc's ID can be sent to the content provider via the internet. Services and functions to be provided vary from disc to disc.

Play DivX® video

DivX video is a digital media format that retains high quality despite a high rate of compression.

1 Insert a disc or USB device that contains the DivX videos.
2 Press , select **[Play Disc]** or **[Browse USB]**, and press **OK**.
   ↳ A contents menu is displayed.
3 Select a video folder, and press **OK**.
4 Select a title to play, and press **OK**.
5 Use the remote control to control the play.

Button	Action
AUDIO	Select an audio language or channel.
SUBTITLE	Select a subtitle language.
■	Stop play.

Note

- You can only play DivX videos that were rented or purchased with the DivX registration code of this product (see "Adjust Settings" > **[Advanced Setup]** > **[DivX® VOD Code]**).
- You can play DivX video files of up to 4GB.
- This product can display up to 45 characters in the subtitle.

Play photo

Play photo as slideshow

You can play JPEG photos (files with .jpeg or .jpg extensions).

1 Insert a disc or USB device that contains the JPEG photos.
2 Press , select **[Play Disc]**or **[Browse USB]**, and press **OK**.
   ↳ A contents menu is displayed.
3 Select a photo folder, and press **OK** to enter.
   - To select a photo, press the **Navigation buttons**.
   - To enlarge the selected photo and start slideshow, press **OK**.
4 Press ▶ to start slideshow play.

Note

- It may require longer time to display the disc content on the TV if large number of songs/photos compiled onto one disc.
- This product can only display digital camera pictures according to the JPEG-EXIF format, typically used by most digital cameras. It cannot display Motion JPEG, or pictures in formats other than JPEG, or sound clips associated with pictures.
- Folders/files that exceed the supported limit of this product cannot be displayed or played.

Control photo play

1 Play a photo slideshow.
   - Press OPTIONS to access play options, select an option, and press **OK**.
   - During slideshow play, you may also press ▲▼ to flip a photo horizontally/vertically.
   - If the slideshow stops, press ▶ to continue play.

Set slideshow interval and animation

1 During play, press OPTIONS.
   ↳ The play options menu is displayed.
2 Select **[Duration per slide]** in the menu, and press **OK**.
3 Select a duration, and press **OK**.
4 Select **[Slide Animation]** in the menu, and press **OK**.
5 Select a type of animation effect, and press **OK**.

Play musical slideshow

Create a musical slideshow to play simultaneously MP3/WMA music files and JPEG photo files.

Note

- To create a musical slideshow, you must store the MP3/WMA and JPEG files on the same disc or USB device.

1 Play MP3/WMA music.
2 Press BACK to return to the main menu.
3 Navigate to enter a photo folder, and press **OK** to start slideshow play.
   ↳ Slideshow begins and continues till the end of the photo folder.
   ↳ Audio continues to play until the end of the disc.
   - To stop the slideshow play, press ■.
   - To stop the music play, press ■ again.

Play music

Control a track

1 Play a track.
2 Use the remote control to control the play.

Button	Action
❚❚	Pause play.
▶	Start or resume play.
■	Stop play.
⏮/⏭	Skip to a previous/next track.
	Select an item to play.
◀◀ /▶▶	Search fast-backward or fast-forward. Press repeatedly to change the search speed.
REPEAT	Select or turn off repeat or shuffle mode.

Play MP3/WMA music

MP3/WMA is a type of compressed audio file (files with .mp3, .wma extensions).

1 Insert a disc or USB device that contains the MP3/WMA music.
2 Press HOME, select **[Play Disc]** or **[Browse USB]**, and then press **OK**.
   ↳ A contents menu is displayed.
3 Select a music folder, and press **OK**.
4 Select a file to play, and press **OK**.
   - To return to the main menu, press BACK.

Note

- For disc recorded in multiple sessions, only the first session is played.
- For a WMA file that is protected by Digital Rights Management (DRM), it cannot be played on this product.
- This product does not support MP3PRO audio format.
- For any special character that is present in the MP3 track name (ID3) or album name, it might not be displayed correctly on the screen because these characters are not supported.
- Folders/files that exceed the supported limit of this product cannot be displayed or played.

Browse PC

With a home network, you can play videos /music / photos which are streamed from a DLNA media server (e.g. PC) to your TV through this DLNA certified product.

Note

- To browse a PC, ensure that a DLNA media server software (e.g. Windows Media Player 11) is installed on the PC.

1. Set up a home network (see "Get started" > "Set up a network").
   - Make sure that you have completed the network installation.
2. On your computer, in the DLNA media server software, you need to set:
   ① Share my media to this product (see "Help" information in the media server software).
   ② Share files or add files to the library (see "Help" information in the media server software).
3. Press ⌂ to display the home menu.
4. Select **[Browse PC]**, and press **OK**.
   ↳ This product automatically scans, and displays a list for the available networked devices.
5. Select your computer from the list, and press **OK**.
6. Select a media file from the DLNA media server (your computer).
7. Press **OK** to start play.
   - You may control play with play features (see "Play video", "Play photo", "Play music" for details).

Note

- Media files may not be played properly, or play function may be limited.
- During files play, an image frame may drop or sound may skip, depending on the performance of the media server and the network environment.

Browse Net TV

Connect this product to the Internet to access the Net TV online service, such as movies, pictures, music infotainment. You can enjoy Net TV on your TV which is connected to this product.

Note

- Because NET TV is an online system, it can be modified over time to better serve its purpose.
- Some Net TV services can be added, changed or stopped after some time.
- For Net TV, You cannot download and save files nor install plug-ins.

1. Set up a network (see "Get started" > "Set up a network").
   - Make sure that you have completed the network installation.
2. Press ⌂ to display the home menu.
3. Select **[Browse NetTV]**, and press **OK**.
   ↳ This product starts to connect to Net TV and opens the start page
   ↳ **For first use**, follow the on-screen instructions to complete the registration, and then switch on the parental control to lock/unlock the services offered on the Net TV pages.

Button	Action
▲▼◀▶	Select a service, or an item on Internet pages.
OK	Confirm a selection.
⮌ BACK	Return to a previous page, or delete input text.
OPTIONS	Access actions related to a current activity.
1 2 ABC 3 DEF 4 GHI 5 JKL 6 MNO 7 PQRS 8 TUV 9 WXYZ 0	Enter number/letter (e.g. email address and lock/unlock code).

The Net TV start page
Show your favorite services and some recommended services.

The Browse all page
You can view all the Net TV services by category. The favorite services are marked as a star icon.

Browse another country
On the Browse all page, you can switch the Net TV country. Another country might have different services.

Mark favorites

You can mark up to 12 services. Only Net TV services can be marked as a favorite. Advertisement and open Internet websites cannot be marked.

1) Select the icon for a service.
2) Press OPTIONS to select Mark favorite, and press **OK**.
   - To unmark a favorite, press OPTIONS to select the unmark action and press **OK**.

Open Internet websites

With Net TV you can link up to the open Internet. You can view any website. Remember that most Internet websites are not tailored to be viewed on a TV screen.

1) On the Browse all page, select Browse Internet, and press **OK**.
2) On the on-screen keyboard, select a character and press **OK**. Repeat Step 2 to enter a web address.
   - To navigate to the available links on a open internet page, press ▲▼◀▶ on the remote control, and press **OK** to open the link.

Note

- Koninklijke Philips Electronics N.V. bears no responsibility regarding the content and the quality of the content provided by the content service providers.

Parental control

You can lock Net TV services and service categories. When a service is locked, you need to enter a code to open the service or category.

1) Switch on the Parental control:
   a. On the Net TV start page, press OPTIONS, select Enable parental control and press **OK**.
   b. With the keypad on the remote control, enter a 4 digit code as lock/unlock code.
   c. Enter the same code to confirm.
2) On the Net TV start page or Browse all page, select a service or category.
3) Press OPTIONS, select Lock service and press **OK**.
   ↳ A lock symbol appears on top of the service icon.
   - To unlock a service or category, select the service and press OPTIONS and select Remove lock.

Note

- Only services on the Net TV pages can be locked. Advertisement and open Internet websites can not be locked.
- Services are locked per country. Categories are locked for all countries.
- When you have registered Net TV and you switch off Parental control in the Options menu, all locks are remembered and available again when you switch Parental control back on.

Clear history

Clear the Parental control code, passwords, cookies and history.

1) Press ⌂ to display the home menu.
2) Select **[Setup]** > **[Network Setup]** > **[Clear Net TV Memory]**.

Note

- If you clear the Net TV memory with Clear history, you need to redo the first use registration when you link up to Net TV again. If you have registered before, you can restore your former favorite services and former locks.

6 Adjust settings

Note

- If the setup option is grayed out, it means the setting cannot be changed at the current state.

Video setup

1 Press ⌂.
2 Select **[Setup]**, and press **OK**.
3 Select **[Video Setup]**, and press ▶.

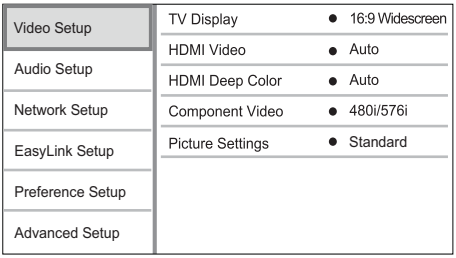

4 Select an option, then press **OK**.

5 Select a setting, then press **OK**.

- To return to the previous menu, press ⮌ BACK.
- To exit the menu, press⌂ .

[TV Display]

Select a display format:

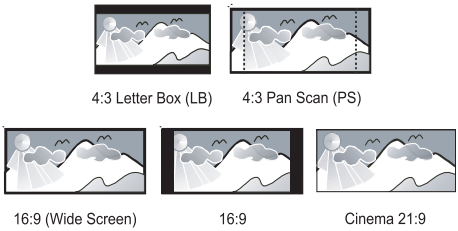

- **[4:3 Letterbox]** – For 4:3 screen TV: wide-screen display with black bars on the top and bottom of the screen.
- **[4:3 Panscan]** – For 4:3 screen TV: full-height display with the trimmed sides.
- **[16:9 Widescreen]** – For wide-screen TV: display picture at ratio 16:9.
- **[16:9]** – For 16:9 screen TV: display picture at ratio 4:3 for a disc with 4:3 ratio, with black bars on the left and right side of the screen.
- **[21:9 Cinema]** – For wide-screen TV of display ratio 21:9.

Note

- If **[4:3 Panscan]** you have selected is not supported by the disc, the screen displays in the **[4:3 Letterbox]** format.
- Help text display is available in all modes, except **[21:9 Cinema]**.
- For optimum viewing with Philips Cinema 21:9 TV, refer to the TV's user manual.

[HDMI Video]

Select an HDMI video output resolution that is compatible with your TV display capability.

- **[Auto]** - Detect and select the best supported video resolution automatically.
- **[Native]** - Set to original video resolution.
- **[480i/576i]**, **[480p/576p]**, **[720p]**, **[1080i]**, **[1080p]**, **[1080p/24Hz]** - Select a video resolution setting that best is supported by the TV. See the TV manual for details.

Note

- If a selected video resolution is not supported with your TV and a blank screen appears, to recover picture display, wait for 10 seconds, or on the remote control press ⌂ and then press "731" (numeric buttons).

[HDMI Deep Color]

This feature is available only when the display device is connected by an HDMI cable, and when it supports deep color feature.

- **[Auto]** - Enjoy vivid images in over a billion colors on Deep Color enabled TV.
- **[On]** - Enjoy vivid images in over a billion colors on Deep Color enabled TV. Output 12 bit color that reduces the posterization effect.
- **[Off]** - Output standard 8 bit color.

[Component Video]

Select a component video output resolution that is compatible with the TV display capability.

- **[480i/576i]**, **[480p/576p]**, **[720p]**, **[1080i]** - Select a video resolution setting that is best supported by the TV. See the TV manual for details.

Note

- If the setting is not compatible with the TV, a blank screen appears. Wait for 10 seconds for auto recovery.
- Copy protected DVDs can only output 480p/576p or 480i/576i resolution.

[Picture Settings]

Select a predefined set of picture color settings.

- **[Standard]** – Original color setting.
- **[Vivid]** – Vibrant color setting.
- **[Cool]** - Soft color setting.
- **[Action]** – Sharp color setting. It enhances the details in the dark area. Ideal for action movies.
- **[Animation]** – Contrast color setting. Ideal for animated pictures.

Audio setup

1 Press ⌂.

2 Select**[Setup]**, and press **OK**.

3 Select **[Audio Setup]**, and press ▶.

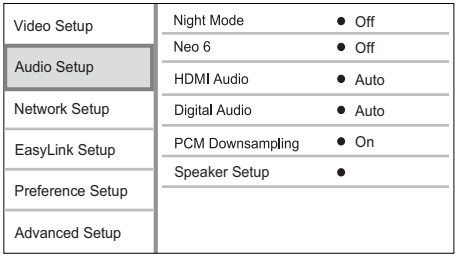

4 Select an option, and press **OK**.

5 Select a setting, and press **OK**.
- To return to the previous menu, press ⮌ **BACK**.
- To exit the menu, press ⌂.

[Night Mode]
Increase a soft sound level such as dialogue to make it easier to hear at a low volume, while simultaneously decreasing a loud sound level.
- **[Auto]** - Detect and select a best sound level at a low volume. Applicable to tracks with Dolby TrueHD audio only.
- **[On]** – For quiet viewing at night.
- **[Off]** – For surround sound with a full dynamic range.

Note
- Applicable only to Dolby encoded DVD-video or BD-video.

[Neo 6]
A post processing by DTS to generate a surround sound effect from 2 channel audio.
- **[Cinema]** – Enable Neo 6 post processing to the cinema mode.
- **[Music]** - Enable Neo 6 post processing to the music mode.
- **[Off]** – Disable Neo 6 post processing.

[HDMI Audio]
Select an HDMI audio output when you connect this product and the TV/audio device with an HDMI cable.
- **[Bitstream]** – Select the best original HD audio experience (only via an HD audio compatible receiver).
- **[Auto]** – Detect and select the best supported audio format automatically.

[Digital Audio]
Select an audio format for the sound output from the DIGITAL OUT jack (coaxial/optical).
- **[Auto]** - Detect and select the best supported audio format automatically.
- **[PCM]** - The audio device does not support multi-channel format. Audio is downmixed to two-channel sound.
- **[Bitstream]** - Select the original audio to experience Dolby or DTS audio (BD-video special sound effect is disabled).

Note
- Ensure that the audio format is supported by the disc and the connected audio device (amplifier/receiver).
- When **[Bitstream]** is selected, interactive audio like button sound is muted.

[PCM Downsampling]
Set the sampling rate for PCM audio output from the DIGITAL OUT jack (coaxial/optical).
- **[On]** - PCM audio is down-sampled at 48kHz.
- **[Off]** - For BD or DVD recorded in LPCM without copyright protection, two-channel audio signals up to 96 kHz are output as LPCM signals with no conversion.

[Speaker Setup]
Optimize the surround output for the connected speaker system.
- **[Speaker Setup]** - Activate the test tone for the speakers and the subwoofer.
- **[Speaker Distance]** - Set the delay time for the speakers and the subwoofer if they are placed closer to the listening position, so that the sound output from all speakers reach the listening position at the same time.
- **[Speaker Volume]** - Set the volume level of the speakes and the subwoofer to get the ideal audio balance.
- **[Speaker Size]**
  - Set the speaker size for the speakers and the subwoofer.
  - Select **[Large]** size for speakers that can produce low frequency signal below 120 Hz.
  - Select **[Off]** if there is no speaker connected.
  - If the front speakers are set to **[Small]**, subwoofer setting is **[On]** and it cannot be changed.
  - If the subwoofer is set to **[Off]**, the front speakers settings are **[Large]** and it cannot be changed.

Tip
- The test tone is emitted from the speaker while adjusting the volume level.
- Allow 1ms setting for every 30cm distance between the speaker and the listening position.

Network setup

1 Press ⌂.
2 Select **[Setup]**, and press **OK**.
3 Select **[Network Setup]**, and press ▶.

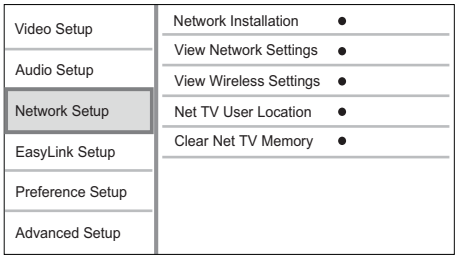

4 Select an option, then press **OK**.
5 Select a setting, then press **OK**.
- To return to the previous menu, press ⮌ BACK.
- To exit the menu, press ⌂.

[Network Installation]
Install the network connection.
[View Network Settings]
Display the information for the current network status.
[View Wireless Settings]
Display the information for the current Wi-Fi status. If the current network is not set to a wireless connection, this feature is de-activated.
[Net TV User Location]
Select the location of the Philips server which provides Net TV services.
[Clear Net TV Memory]
Clear the cookies, history, data you input for Net TV which are stored in the cache area of the web browser.

EasyLink setup

1 Press ⌂.
2 Select **[Setup]**, and press **OK**.
3 Select **[EasyLink Setup]**, and press ▶.

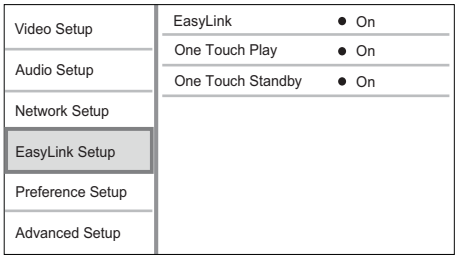

4 Select an option, and press **OK**.
5 Select a setting, and press **OK**.
- To return to the previous menu, press ⮌ BACK.
- To exit the menu, press ⌂.

[EasyLink]
This product supports Philips Easylink which uses the HDMI CEC (Consumer Electronics Control) protocol. You can use one single remote control to control all EasyLink-compliant devices that are connected through HDMI connectors.
- **[On]** - Turn on EasyLink features.
- **[Off]** - Disable EasyLink features.

[One Touch Play]
When you press ⏻ (standby) to turn on this product, the TV (if the TV supports one-touch play) automatically turns on and switches to the video-in channel. Disc play starts if there is a disc in this product.
- **[On]** - Turn on one-touch play feature.
- **[Off]** - Disable one-touch play feature.

[One Touch Standby]
When you press and hold ⏻(standby), all the connected HDMI CEC devices (if the device supports one-touch standby) switch to standby mode simultaneously.
- **[On]** - Turn on one-touch standby feature.
- **[Off]** - Disable one-touch standby feature.

Note

- You must turn on the HDMI CEC operations on the TV/ devices before you can enjoy the EasyLink controls. See the TV/devices manual for details.
- Philips does not guarantee 100% interoperability with all HDMI CEC compliant devices.

Preference setup

1 Press ⌂.
2 Select **[Setup]**, and press **OK**.
3 Select **[Preference Setup]**, and press ▶.

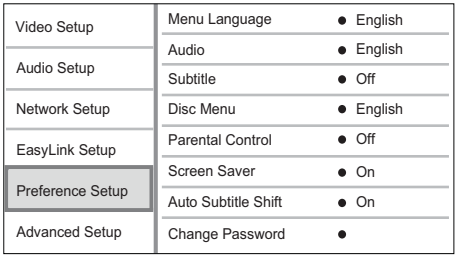

4 Select an option, then press **OK**.
5 Select a setting, then press **OK**.

- To return to the previous menu, press ⮌ BACK.
- To exit the menu, press ⌂.

[Menu Language]
Select an on-screen menu language.

Note

- If this product is connected to an HDMI CEC compliant TV using a HDMI cable, it switches automatically to the same menu display language as per your TV setting (if the language set on TV is supported by this product).

[Audio]
Select an audio language for disc play.
[Subtitle]
Select a subtitle language for disc play.
[Disc Menu]
Select a language for disc menu.

Note

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some discs, the subtitle/audio language can only be changed from the disc menu.

[Parental Control]
Restrict access to discs that are unsuitable for children. These types of discs must be recorded with ratings.
To access, enter your last set password or '**0000**'.

Note

- Rated discs above the level you set in **[Parental Control]** require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select '**8**' for DVD-video and BD-Video.
- Some discs have ratings printed on them but are not recorded with ratings. This function has no effect on such discs.

[Screen Saver]
Turn on or off the screen saver mode. It helps to protect the TV screen from being damaged due to over exposure to static image for being too long.
- **[On]** - Set the screen saver active after 10 minutes of inactivity (for example, in the pause or stop mode)
- **[Off]** - Disable screen saver mode.

[Auto Subtitle Shift]
Turn on or off the automatic subtitle shift.
- **[On]** - The subtitle position on the TV screen is automatically adjusted.
- **[Off]** - Disable the automatically subtitle shift.

Note

- This feature only works when **[TV Display]** is set to **[21:9 Cinema]**.

[Change Password]
Set or change the password.

1) Press the Numeric buttons to enter the password or your last set password. If you forget the password, enter '**0000**', then press **OK**.
2) Enter the new password.
3) Enter the same password again.
4) Move to **[Confirm]** in the menu and press **OK**.

[Display Panel]
Select a brightness level of the front panel display.
- **[Normal]** - Normal brightness.
- **[Dim]** - To dim display.

[Auto Standby]
Turn on or off auto standby mode. It is an energy saving feature.
- **[On]** - Switch to standby after 30 minutes of inactivity (for example, in pause or stop mode).
- **[Off]** - Disable auto standby mode.

[VCD PBC]
Turn on or off the content menu of VCDs/SVCDs with PBC (playback control) feature.
- **[On]** - Display the index menu when you load a disc for play.
- **[Off]** - Skip the menu and start play from the first title.

Advanced setup

1 Press ⌂.
2 Select **[Setup]**, and press **OK**.
3 Select **[Advanced Setup]**, and press ▶.

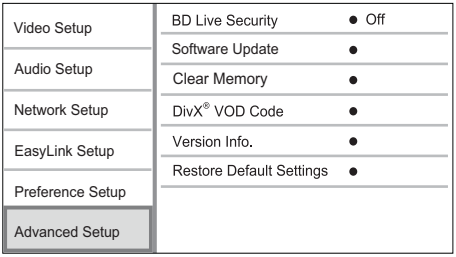

4 Select an option, and press **OK**.

5 Select a setting, and press **OK**.
- To return to the previous menu, press **BACK** .
- To exit the menu, press .

[BD-Live Security]
You can restrict internet access for BD-Live bonus contents which are available to certain Blu-ray discs.
- **[On]** - Internet access is prohibited for all BD-Live contents.
- **[Off]** - Internet access is permitted for all BD-Live contents.

[Software Update]
Update the software of this product (if a latest version is available on Philips website) to enhance the performance of this product.
- **[USB]** - Update software from the USB device which is connected to this product.
- **[Network]** - Update software from the internet.

Note

- For detailed software updating, see "Additional information" > "Update software".

[Clear Memory]
If the internal memory of this product is not enough to download BD-Live bonus contents for a BD disc, reformat the local storage to clear all the contents.

Note

- When you clear the local storage, previous download of BD-Live bonus contents is no longer available.

[DivX® VOD Code]
Display the DivX® registration code.

Tip

- Use this product's DivX registration code when you rent or purchase video from www.divx.com/vod. The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

[Version Info.]
Display the software version and the MAC address of this product.

Tip

- This information is needed for you to check if a latest software version is available at the Philips website so that you can download and install on this product.

[Restore Default Settings]
Reset all the settings of this product to the factory settings, except for **[Parental Control]** setting.

7 Additional Information

Update software

For software updates to enchance performance, check the current software version of this product to compare with the latest software (if available) at the Philips website.

1 Press .
2 Select **[Setup]**, and press **OK**.
3 Select **[Advanced Setup]** > **[Version Info.]**, and press **OK**.

Update software via network

1 Set up the internet connection (see "Get started' > "Set up a network").
2 In the Home menu, select **[Setup]** > **[Advanced Setup]** > **[Software Update]** > **[Network]**.
↳ You are prompted to start upgrading process if upgrade media is detected.
3 Follow the instructions on the TV screen to confirm update operation.
↳ Once software update is complete, this product automatically turns off to standby.

Update software via USB

1 Go to www.philips.com/support to check if the latest software version is available for this product.
2 Download the software into a USB flash drive:
① Un-zip the download, and make sure that the un-zipped folder is named "UPG".
② Put the "UPG" folder in the root directory.
3 Insert the USB flash drive to the (**USB**) jack on the front panel of this product.
4 In the Home menu, select **[Setup]** > **[Advanced Setup]** > **[Software Update]** > **[USB]**.
5 Follow the instructions on the TV screen to confirm update operation.
↳ Once software update is complete, this product automatically turns off to standby.

Note

- Do not turn off the power or remove the USB flash drive when software updating is in progress to prevent possible damage of this product.

Care

Caution

- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.

Clean discs

Wipe the disc with a micro fibre cleaning cloth from the centre to the edge in a straight line movement.

Specifications

Note

- Specifications are subject to change without notice

Video

- Signal system: PAL / NTSC
- Composite video output: 1 Vp-p (75 ohm)
- Component video output: 480/576i, 480/576p, 720p, 1080i
  - Y: 1 Vp-p (75 ohm)
  - Pb: 0.7 V-pp (75 ohm)
  - Pr: 0.7 V-pp (75 ohm)
- HDMI output 480p, 576p, 720p, 1080i, 1080p, 1080p24

Audio

- 2 Channel analog output
  - Audio Front L + R : 2 Vrms (> 1 kohm)
  - Signal to noise ratio: > 120 dB
  - Dynamic Range (1kHz): >100 dB
  - Total harmonic distortion: <90 dB
- 7.1 Channel analog output
  - Audio Front L + R : 2 Vrms (> 1 kohm)
  - Audio Surrond L + R : 2 Vrms (> 1 kohm)
  - Audio Center : 2 Vrms (> 1 kohm)
  - Audio Subwoofer : 1.15 Vrms (> 1 kohm)
  - Audio Rear L + R: 2 Vrms (> 1 kohm)
- Digital output: 0.5 Vp-p (75 ohm)
  - Optical, Coaxial
- HDMI output

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)

Main unit

- Power supply rating
  - Europe: 220~240V ~AC, ~50 Hz
- Power consumption: 22W
- Power consumption in standby mode: < 0.25 W
- Dimensions (w x h x d): 435 x 55.7 x 245 (mm)
- Net Weight: 2.4 kg

Accessories supplied

- Remote control and batteries
- Audio/Video cables
- Power cable
- Quick start guide
- User manual
- CD-ROM built in multi-lingual user manual

Optional accessory

- A wireless Philips USB adapter(named WUB1110, sold separately)
  - Multimedia connections: Wi-Fi 802.11b/g/n
  - Connectivity: Rear connection (USB)
  - Ambient temperature: 5 deg C to 40 deg C.
  - Dongle dimensions (W x H x D): 28.4 x 82 x 13.4 mm

Laser Specification

- Laser Type:
  - BD Laser Diode: AlGaInN
  - DVD Laser Diode: AlGaInP
  - CD Laser Diode: AlGaInP
- Wave length:
  - BD: 405 +5nm/-5nm
  - DVD: 655 +10nm/-10nm
  - CD: 790 +10nm/-20nm
- Output power:
  - BD: Max. ratings: 20mW
  - DVD: Max. ratings: 6mW
  - CD: Max. ratings: 7mW

8 Troubleshooting

Warning

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.
If you have problems using this product, check the following points before you request service. If you still have a problem, register your product and get support at www.philips.com/welcome.

Main unit

No reaction to the remote control.

- Connect this product to the power outlet.
- Point the remote control at the IR sensor located on the front panel of this product.
- Insert the batteries correctly.
- Insert new batteries in the remote control.

Picture

No picture.

- See TV manual for correct video input selection. Change the TV channel until you see the Philips screen.

No picture on HDMI connection.

- If this product is connected to an unauthorized display device with an HDMI cable, the audio/video signal may not be output.
- Check if the HDMI cable is faulty. Replace a new HDMI cable.
- On the remote control, press ⌂ and then press "731" (numeric buttons) to recover picture display.

No high-definition video signal on the TV.

- Make sure that the disc contains high-definition video.
- Make sure that the TV supports high-definition video.

Sound

No audio output from the TV.

- Ensure that the audio cables are connected to the audio input of the TV.
- Assign the audio input of the TV to the corresponding video input. See the TV user manual for details.

No audio output from the loudspeakers of the audio device (home theater /amplifier/receiver).

- Ensure that the audio cables are connected to the audio input of the audio device.
- Turn on the audio device to its correct audio input source.

No 7.1 - channel audio from the loudspeaker of the audio system.

- Ensure that the disc contains 7.1 - channel audio.
- Ensure that the audio device supports 7.1 - channel audio.
- Ensure that the audio format is supported by the disc and the connected audio device (amplifier/receiver).

No sound on HDMI connection.

- You may not hear any sound from the HDMI output if the connected device is non-HDCP compliant or only DVI-compatible.

No secondary audio output for Picture-in-Picture feature.

- When **[Bitstream]** under the **[HDMI Audio]** or **[Digital Audio]** menu is selected, interactive sound like secondary sound for Picture-in-Picture feature is muted. Deselect **[Bitstream]**.

Play

Disc cannot be played.

- Ensure that the disc is correctly loaded.
- Ensure that this product supports the disc. See "Your product" > "Playable media".
- Ensure that this product supports the region code of the DVD or BD.
- For DVD±RW or DVD±R, ensure that the disc is finalized.
- Clean the disc.

Data files (JPEG, MP3, WMA) cannot be played or read.

- Ensure that the data file was recorded in the UDF, ISO9660 or JOLIET format.
- Ensure that the selected group (folder) does not contain more than 9,999 files for DVD, and 999 files for CD.
- Ensure that the JPEG file extension is.jpg, .JPG, .jpeg or .JPEG.
- Ensure that the MP3/WMA file extension is .mp3 or .MP3, and .wma or .WMA for windows Media™ Audio.

DivX video files cannot be played.

- Ensure that the DivX video file is complete.
- Ensure that the file name extension is correct.

The contents of the USB flash drive cannot be read.

- The USB flash drive format is not compatible with this product.
- Maximum size of memory supported is 160GB.

'No entry' or 'x' sign appears on the TV.

- The operation is not possible.

EasyLink feature does not work.

- Ensure that this product is connected to the Philips brand EasyLink TV and the **[EasyLink]** in the menu is set to **[On]**.

Unable to access BD-Live feature.

- Check the network connection or ensure that the network has been set up.
- Clear local storage, internal memory (if any) or USB.
- Ensure that the BD disc supports BD Live feature.

Network

Wireless network is not found or distorted.

- Microwave ovens, Dect phones or other wireless devices in your neighborhood might disturb the wireless network.
- Make sure that the firewalls in your network allow access to the wireless connection of this product.
- If the wireless network does not work properly in your home, try the wired network connection (see "Get started" > "Set up a network").

Net TV does not work.

- Check the router connection (refer to the user manual for the router).

Browse PC works slowly.

- Look in your wireless router's user manual for information on indoor range, transfer rate and other factors of signal quality.
- You need a high speed connection for your router.

9 Glossary

A

Aspect ratio
Aspect ratio refers to the width to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

AVCHD
AVCHD is a format (standard) for high definition video cameras that can be used to record and play high-resolution HD images.

B

Blu-ray Disc (BD)
Blu-ray Disc is a next generation optical video disc capable of storing five times more data than a conventional DVD. The large capacity makes it possible to benefit from the features such as high-definition videos, multichannel surround sound, interactive menus and so on.

BONUSVIEW
BonusView, also known as "Profile 1.1". In addition to basic playback and interactive features, BonusView players introduced after 31st October, 2007 enables users to enjoy 'Picture-in-Picture' (PiP) and secondary audio features (useful when playing games that use additional audio stream while the movie is playing) on compatible BonusView discs.

D

Digital Audio
Digital Audio is a sound signal that has been converted into numerical values. Digital sound can be transmitted through multiple channels. Analogue sound can only be transmitted through two channels.

DivX Video-On-Demand
This DivX Certified ® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX video.

Dolby Digital
A surround sound system developed by Dolby Laboratories that contains up to six channels of digital audio (front left and right, surround left and right, center and subwoofer.)

DTS
Digital Theatre Systems. A surround sound system for providing 5.1 channels of discrete digital audio in consumer electronics products and software content. It is not developed by Dolby Digital.

H

HDCP
High-bandwidth Digital Content Protection. This is a specification that provides a secure transmission of digital contents between different devices (to prevent unauthorized copyright.)

HDMI
High-Definition Multimedia Interface (HDMI) is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality, completely free from noise. HDMI is fully backward-compatible with DVI. As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High-bandwidth Digital Content Protection) will result in no Video or Audio output.

J

JPEG
A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognized by their file extension '.jpg' or '.jpeg.'

L

LAN (Local Area Network)
A group of linked devices in a company, school or home. Indicates the boundaries of a particular network.

Local storage
This storage area is used as destination for storing additional contents from BD-Live enabled BD-Video.

M

MP3
A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

P

PBC
Playback Control. A system where you navigate through a Video CD/Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

PCM
Pulse Code Modulation. A digital audio encoding system.

R

Region code
A system that allows discs to be played only in the region designated. This unit only plays discs that have compatible region codes. You can find the region code of your unit on the product label. Some discs are compatible with more than one region (or ALL regions.)

W

WMA
Windows Media™ Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded with Windows Media player version 9 or Windows Media player for Windows XP. Files are recognized by their file extension '.wma.'

© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.
BDP7500 MK II_12_UM_V2.0_1022